

1

STARTUP GUIDE



snowcookie®

AT HOME

1 GET TO KNOW YOUR GEAR



3x snowcookie sensors
measure ski and body movements




2x adhesive ski mounts
hold the sensors on your skis



chest harness
holds the central sensor on your chest




surface preparation cloth
degreases your skis before applying the ski mount



wireless charging pad
charges up to 3 snowcookies at once (and your iPhone too!)

2 PREPARE YOUR SKIS

Adhesive mounts are compatible with **FLAT SURFACE*** skis only!



Make sure your skis are clean, dry and warm before applying the adhesive mounts.

+20°C
70°F

* we don't recommend applying the mounts on the skis which are textured or have an otherwise uneven surface, you do so at your own risk, you should secure the sensor to the binding with a safety cord.



3 INSTALL THE MOUNT



Clean the target area with the **surface preparation wipe** and let it dry well.



Choose a **flat, centered area** on each ski, approximately **5 cm / 2 in.** in front of the binding

Peel off the red protective layer from the adhesive mount. Apply the adhesive mount to the ski and **press hard**. The dual-sided tape bonds securely within **24 hours**.

4 GET THE APP & PAIR THE SNOWCOOKIES WITH YOUR IPHONE



Make sure you have at least **iPhone 6* & iOS 11.1+.**


*snowcookie app compatible with: iPhone 6/6s/6 Plus/6s Plus, iPhone 7/7 Plus, iPhone 8/8 Plus, iPhone X or newer



Internet connection required to download the app and set up your profile



Download the **Snowcookie - Smart Ski Tracker App**.

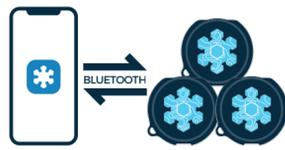

Open the app and follow the on-screen instructions.

ON THE SLOPE

5 MOUNT YOUR SNOWCOOKIES!



PRESS



Blue snowcookie - chest harness

Orange snowcookie - left ski

Green snowcookie - right ski



LEFT



RIGHT




Put the chest harness on. You can wear it under or over your jacket



Place the blue snowcookie into the chest harness with its light pointing outwards.

Guide orange and green snowcookies into ski mounts until you hear a click and the release button locks into the notch. Flat side of the snowcookie should face the inside the mount.

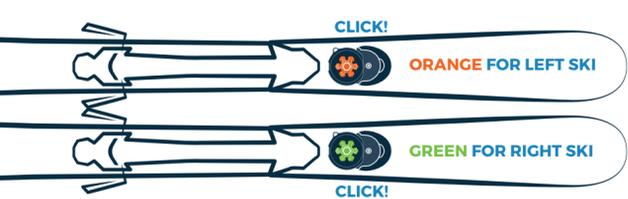

CLICK!

ORANGE FOR LEFT SKI

CLICK!

GREEN FOR RIGHT SKI

CLIP IN



To clip in the snowcookie **PRESS** the release button downwards and slide the sensor flat side forward until clicks

CLIP OUT



To remove the snowcookie from the mount **PRESS** the release button and **PUSH** backwards.

COLOR INDICATORS

SET UP

Blinking blue: snowcookies are ready to be paired with your phone.



STANDBY

Slowly glowing snowcookies indicate that they are paired with your phone and connected to the app. They're begging you to hit the slopes.



glowing **BLUE** - central snowcookie
Put it into your chest harness.

glowing **ORANGE** - left ski snowcookie

glowing **GREEN** - right ski snowcookie

ACTION

Rapid double blinking indicates action! Your snowcookies will blink **blue, orange and green** when you click Record and start skiing.



BATTERY CHECK

You can check the battery level on your snowcookie in 2 ways:



1 Check the app - the circle around each snowcookie indicates the remaining charge.

2 Double click the snowcookie when it's on. It will change its color for a few seconds to indicate the charge level:



Beeping sound indicates a complete discharge of the battery.

TECHNICAL SPECIFICATION

Radiocommunication : **Bluetooth Low Energy BLE 4.2**

Wireless charging standard: **Qi compatible**

Battery capacity: **> 8 h**

Waterproof rating: **IP 67**

Working Temperature: **-20°C to +40°C**

Working Altitude: **0 - 6000 m**

Storage Temperature: **-5 to +25 °C**

IMPORTANT SAFETY AND PRODUCT INFORMATION

WARNING!

Failure to avoid the following potentially hazardous situations could result in an accident or collision resulting in death or serious injury.

Health warnings

*Always consult your physician before beginning or modifying exercise program. If you have a pacemaker or other implanted electronic device, consult your physician before using a central sensor.

*Sensors and accessories are consumer devices, not medical devices, and could suffer from interference from external electrical sources.

The data readings are for reference only, and no responsibility is accepted for the consequences of any erroneous readings.

BATTERY WARNINGS

A lithium-ion battery can be used in this device. If these guidelines are not followed, batteries may experience a shortened lifespan or may present a risk of damage to the device, fire, chemical burn, electrolyte leak, and/or injury.

* Do not leave the device exposed to a heat source or in a high-temperature location, such as in the sun in an unattended vehicle. To prevent the possibility of damage, remove the device or store it out of direct sunlight, such as in the original box.

* Do not disassemble, modify, remanufacture, puncture or damage the device or batteries.

*Do not immerse or expose the device or batteries to water or other liquids, fire, explosion, or other hazards.

* Never put batteries or devices in the mouth. If swallowed, contact a physician or poison control center.

* Do not use power and/or data cable that is not approved or supplied by the Snowcookie Sports.

* If using an external battery charger, only use the Qi compatible devices.

*The batteries can be replaced only through Snowcookie dealers/service points.

* Do not operate the device outside of the temperature ranges specified in the manual included in the package.

* When storing the device for an extended period, store within the temperature ranges specified in the manual.

* Do not remove or attempt to remove the non-user-replaceable battery

* Contact your local waste disposal department to dispose of the device/batteries in accordance with applicable local laws and regulations.

DEVICE OPERATION PRACTICES

Remember about some safety measures while using the Snowcookie sensors:

* Snowcookies are not edible, despite the name, they cannot be chewed, digested and munched on.)

* Snowcookie sensors are not toys, are not intended for children under the five years old.

* In order to keep your snowcookies waterproof you must not puncture the top of the button with sharp objects. This includes ski poles that could damage this surface. If pressed too strong.

* Snowcookies does not have GPS sensor on board. geolocation is derived from your smartphone.

* We recommend using an additional safety cord to further secure snowcookies to your bindings.


* Please make sure all the devices including the smartphone are properly charged or low battery level might affect the data quality.

* If you are using other bluetooth devices, such as headphones, when skiing with the snowcookie sensors some ski data loss may occur caused by the processes independent from our software

RADIO FREQUENCY RADIATION EXPOSURE

This device is a mobile transmitter and a receiver that uses an internal antenna to send and receive low levels of radio frequency energy for data communications (RF). The device emits RF energy below the published limits when operating in its maximum output power mode and when used with Snowcookie Application and accessories. To comply with RF exposure compliance requirements, the device should be used as described in the manual. The device should not be used in other configurations.

This device must not be co-located or operated in conjunction with any other transmitter or antenna, doing so limits its functionality and may cause errors in recordings.



DECLARATION OF CONFORMITY

With this, MedicalBay declares that this product complies with the essential requirements and other relevant provisions of Directive 1999/5/EC. To view the full declaration go to:

www.snowcookiesports.com/compliance

Industry Canada Compliance n/a

FCC Compliance n/a

SOFTWARE LICENSE AGREEMENT

BY USING THIS DEVICE AND CORRESPONDING SOFTWARE, YOU AGREE TO TERMS OF END USER LICENSE AGREEMENT, AND YOU AGREE TO BE BOUND BY ITS TERMS.

The complete text of EULA is available in the application or following website address: www.snowcookiesports.com/eula

LIMITED WARRANTY

This Product is warranted to be free from defects in materials or workmanship for one year from the date of purchase.

The complete warranty text is included in EULA and available on our website www.snowcookiesports.com/eula

INTERNATIONAL PURCHASES

A separate warranty may be provided by international distributors for devices purchased outside the EU depending on the country. If applicable, this warranty is provided by the local distributor and this distributor provides local service for your device. Devices purchased

internationally must be returned to the Swiss service center.

AUSTRALIAN & NEW ZEALAND PURCHASES

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits of our Limited Warranty are in addition to other rights and remedies under applicable law in relation to other products.

MAP DATA INFORMATION

Snowcookie uses a combination of governmental and private data sources. Virtually all data sources contain some inaccurate or incomplete data. In some countries, complete and accurate map information is either not available or is prohibitively expensive.

© MedicalBay Sp. z o.o. or its subsidiaries.
MedicalBay Sp. z o.o. Francuska 182/15, 40-507 Katowice, Poland
www.snowcookiesports.com